 




CONTROL EQUIPMENT

ø 16mm

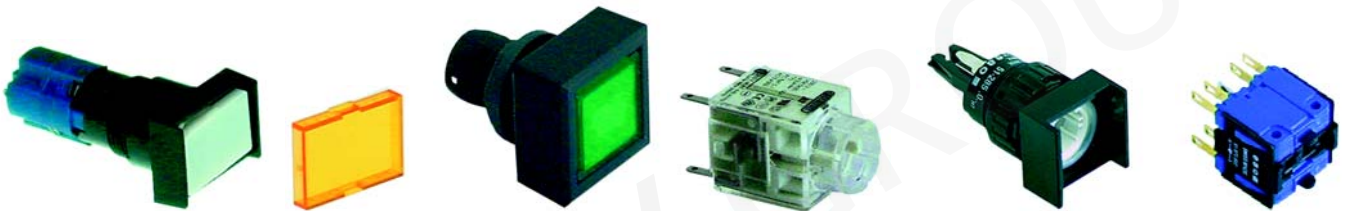

ø 22mm



ø 30mm, 24x24mm



G.E.V. Großküchen-Ersatzteil-Vertrieb GmbH
Robert-Koch-Straße 3a
82152 Planegg/Munich
Germany

Phone: +49 (0)89 745572-0
Fax: +49 (0)89 745572-83
order@gev-online.com
www.gev-online.com

Member of the  **GEV GROUP**

C

Control equipment

∅ 16mm DECA



item	order no.	description	front end (mm)	contacts	voltage
1	346479	switch	∅ 18	2NO/ 2NC + lamp	5A/250V
2	346478	push button	∅ 18	1NO/ 1NC + lamp	5A/250V
3	346481	switch	18x18	2NO/ 2NC + lamp	5A/250V
	346480	push button	18x18	2NO/ 2NC + lamp	5A/250V
4	346477	switch	18x24	2NO/ 2NC + lamp	5A/250V
	346476	push button	18x24	2NO/ 2NC + lamp	5A/250V



item	order no.	description	front end (mm)	colour
1	346634	switch actuator	∅ 16	green
2	346635	switch actuator	∅ 16	red
3	346636	switch actuator	∅ 16	white
4	346637	switch actuator	∅ 16	yellow




item	order no.	description	front end (mm)	colour
1	346638	switch actuator	15x15	green
2	346639	switch actuator	15x15	red
3	346640	switch actuator	15x15	white
4	346641	switch actuator	15x15	yellow



item	order no.	description	front end (mm)	colour
1	346642	switch actuator	15x21,5	green
2	346643	switch actuator	15x21,5	red
3	346644	switch actuator	15x21,5	white
4	346645	switch actuator	15x21,5	yellow

 ∅ 16mm EAO

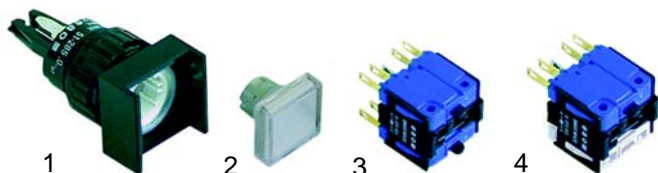

item	order no.	description	front end (mm)	contacts
1	345753	switch attachment	18x18	
	345755	push button attachment	18x18	
2	345754	switch actuator		
3	345751	switch block		2 NO/ 2 NC + lamp
4	345265	switch block		1 NO/ 1 NC + lamp




item	order no.	description	symbol
1	345756	inlay card	reset
2	345264	inlay card	core temperature
3	345752	inlay card	operation temperature

∅ 16mm RAFI



item	order no.	description	contacts
1	345139	switch actuator	1 NO/ 1 NC
	346716	push switch	1 NO/ 1 NC
2	346717	switch actuator	2 NO/ 2 NC
	346718	push switch	2 NO/ 2 NC
3	346722	switch actuator	3 NO/ 3 NC

 


item	order no.	description	colour
1	345140	fascia	clear
2	346719	fascia	yellow
3	346720	fascia	green
4	346721	fascia	red

∅ 16mm SIEMENS




item	order no.	description	colour
1	346769	switch actuator	black
2	346770	switch actuator	red
3	346356	switch actuator	green

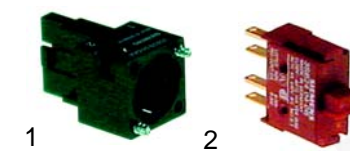 

item	order no.	description	contacts
1	346355	contactor block holder	
2	346354	switch block	1 NO
	346771	switch block	1 NC

 Ø 16mm stick

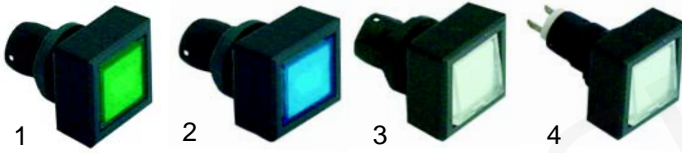


item	order no.	description	colour
1	359182	switch actuator	green
2	359196	switch actuator	blue
3	359183	switch actuator	clear
4	359181	signal lamp	clear



item	order no.	description	item	order no.	description
1	359189	symbol on	4	359191	symbol 1
2	359190	symbol off	5	359192	symbol 2
3	359188	symbol M	6	359193	symbol water



item	order no.	description	function
1	359184	switch block	1 NO / 1 NC impulse
2	359811	switch block	2 NO / 2 NC impulse
3	359186	switch block	1 NO / 1 NC + lamp impulse
4	359793	switch block	2 NO / 2 NC + lamp impulse

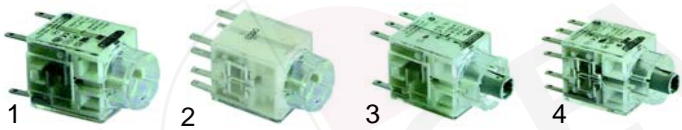 


item	order no.	description	function
1	359185	switch block	1 NO / 1 NC with catch
2	359812	switch block	2 NO / 2 NC with catch
3	359194	switch block	1 NO / 1 NC + lamp with catch
4	359187	switch block	2 NO / 2 NC + lamp with catch

Ø 22mm ALLEN BRADLEY series 800E (discontinued model)



item	order no.	description	colour
1	346277	switch actuator with catch, illuminated	clear
2	346278	impulse switch actuator, illuminated	red
3	346329	holder	

 

item	order no.	description	function
1	346276	switch block	1 NO
2	346275	bulb housing Ba9s, 250V	-


Ø 22mm BACO (Fanal)



item	order no.	description
1	301110	switch actuator green
2	301111	switch actuator red
3	301112	switch actuator without charging card
4	301113	push button arrow upper
5	301114	push button arrow bottom




item	order no.	description	function
1	301056	rotary switch	0-1 with catch
	301117	rotary switch	0-1 impulse
	301116	rotary switch	1-0-2 with catch
	301118	rotary switch	1-0-2 impulse
2	346825	rotary switch illuminated	0-1 with catch
3	301119	switch block	1 NO / 1 NC
	301055	switch block	2 NO
	301120	switch block	2 NC

 

item	order no.	description	function
1	301122	attachment carrier	-
2	301123	switch block	1 NO
	301124	switch block	1 NC
3	346826	bulb housing 400V	-
4	301129	blank lock	-

ø 22mm BRETER

 discontinued model

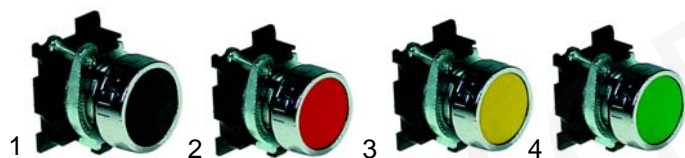

item	order no.	description	
1	345785	switch actuator black	
2	345790	switch actuator red	
3	345788	switch actuator yellow	
4	345789	switch actuator green	

ø 22mm EFA (Telemecanique)


series XB2 metal series



item	order no.	description		colour
1	345400	illuminated push button		clear
2	345242	illuminated push button		red
3	345243	illuminated push button		green
4	345164	illuminated push button		yellow




item	order no.	description		function
1	345858	switch actuator black		
2	345730	rotary switch		1 - 0 - 2 with catch
3	345640	switch block		1 NO
4	345786	switch block		1 NC

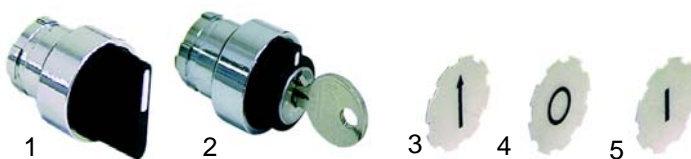 

item	order no.	description		function
1	345222	rotary switch		0 - 1 with catch
	345406	rotary switch		0 - 1 impulse
	345223	rotary switch		1 - 0 - 2 with catch
	345407	rotary switch		1 - 0 - 2 impulse
2	345408	key switch		0 - 1 with catch
3	345401	inlay card arrow		-
4	345403	inlay card 0		-
5	345404	inlay card I		-

 ø 22mm EAO

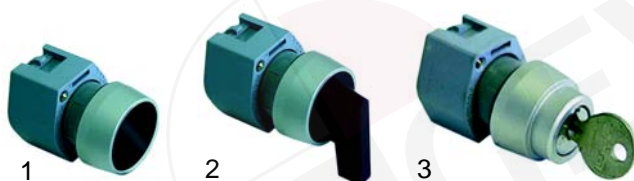

item	order no.	description		function
1	346714	switch actuator		with catch
	346715	switch actuator		impulse
2	346470	rotary switch		0 - 1 with catch
	345263	rotary switch		0 - 1 impulse
	346471	rotary switch		1 - 0 - 2 with catch
	345260	rotary switch		1 - 0 - 2 impulse
3	345244	key switch		0 - 1 with catch




item	order no.	description		function
1	345412	switch block with holder		1 NO/ 1NC
	345410	switch block with holder		2 NO
	345411	switch block with holder		2 NC
2	345220	switch block		1 NO
	345221	switch block		1 NC



Pos.	order no.	description		function
1	345272	switch block		1 NO/ 1 NC
2	345261	switch block		2 NO



item	order no.	description		colour
1	345970	indicator light		clear
2	345397	indicator light		red
3	345395	indicator light		green
4	345396	indicator light		yellow

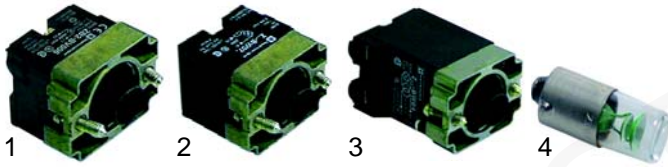 


item	order no.	description	connection
1	345566	bulb socket, direct connection	max. 400V
2	345567	bulb socket 130V, with multiplier	230VAC
3	345568	bulb socket 6V	230VAC
4	359606	glow lamp Ba9s	230V
	359607	glow lamp Ba9s	400V
	359656	incandescent lamp Ba9s	130V
	359657	incandescent lamp	6V


series XA2 type series plastic




item	order no.	description	colour
1	345342	illuminated push button	clear
2	345594	illuminated push button	red
3	345595	illuminated push button	green
4	345343	illuminated push button	yellow

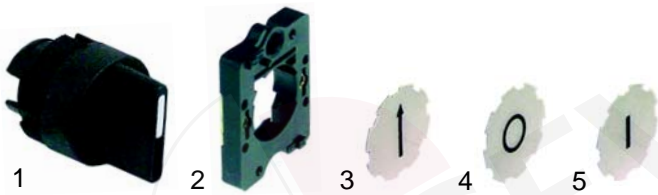 


item	order no.	description	function
1	345354	rotary switch	0 - 1 with catch
	346557	rotary switch	0 - 1 impulse
	345359	rotary switch	1 - 0 - 2 with catch
	346558	rotary switch	1 - 0 - 2 impulse
2	346660	holder	-
3	345401	inlay card arrow	-
4	345403	inlay card 0	-
5	345404	inlay card 1	-

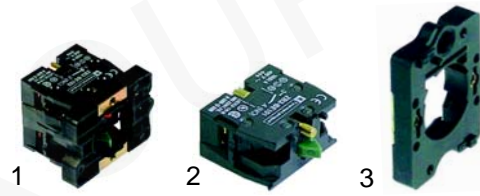 

item	order no.	description	contacts
1	345379	switch block with holder	1 NO/ 1 NC
	345374	switch block with holder	2 NO
	345378	switch block with holder	2 NC
2	345220	switch block	1 NO
	345221	switch block	1 NC
3	346660	holder	-

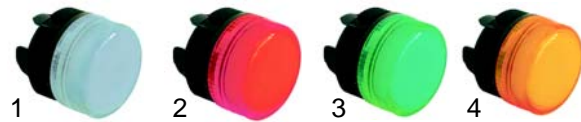 

item	order no.	description	colour
1	345344	indicator light	clear
2	345352	indicator light	red
3	345353	indicator light	green
4	345596	indicator light	yellow

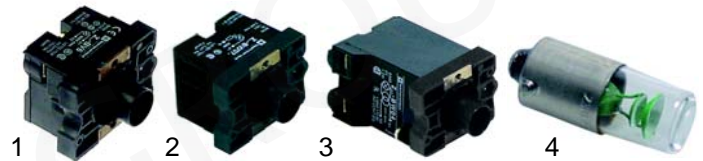 


item	order no.	description	voltage	connection
1	345380	bulb socket direct connection	400V	til 400V
2	345385	bulb socket with multiplier	130V	230VAC
3	345387	bulb socket with transformer	6V	230VAC
4	359606	glow lamp Ba9s	230V	-
	359607	glow lamp Ba9s	400V	-
	359656	incandescent lamp	130V	-
	359657	incandescent lamp	6V	-

© GEV 2007

Ø 22mm ERSCE

 metal series

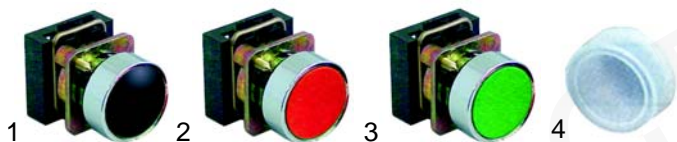

item	order no.	description	colour
1	346646	switch actuator	black
2	346647	switch actuator	red
3	345987	switch actuator	green
4	346655	silicone cover	




item	order no.	description	function
1	345986	rotary switch	0 - 1 with catch
	346648	rotary switch	0 - 1 impulse
	346649	rotary switch	1 - 0 with catch
	346650	rotary switch	1 - 0 - 2 (1 impulse)
	346651	rotary switch	1 - 0 - 2 (2 impulse)
	346652	rotary switch	1 - 0 - 2 (1 + 2 impulse)
2	346653	switch actuator red illuminated	
3	346654	switch actuator green illuminated	
4	346655	silicone cover	

type series plastic




item	order no.	description	colour
1	346796	switch actuator	black
2	346797	switch actuator	red
3	345798	switch actuator	green
4	346655	silicone cover	

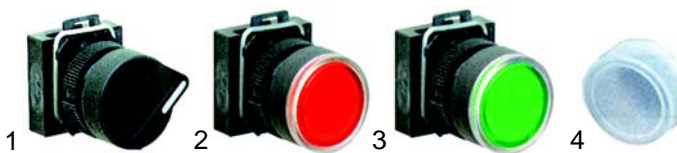 

item	order no.	description	function
1	346799	rotary switch	0 - 1 with catch
	346800	rotary switch	0 - 1 impulse
	346801	rotary switch	1 - 0 - 2 with catch
	346802	rotary switch	1 - 0 - 2 (1 impulse)
	346803	rotary switch	1 - 0 - 2 (2 impulse)
	346804	rotary switch	1 - 0 - 2 (1 + 2 impulse)
2	346805	switch actuator red, illuminated	
3	346806	switch actuator green, illuminated	
4	346655	silicone cover	



item	order no.	description	function
1	346656	lamp block	250V
2	345988	switch block	1 NO
3	345989	switch block	1 NC

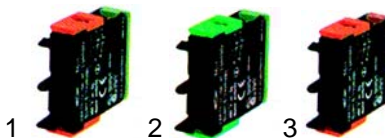 

item	order no.	description	function
1	346657	switch block	1 NO/ 1 NC
2	346658	switch block	2 NO
3	346659	switch block	2 NC

Ø 22mm GE (AEG)



item	order no.	description	function
1	346666	switch actuator without charging card	
2	346667	switch actuator without charging card	
	346668	rotary switch	0 - 1 with catch (V-position)
	346669	rotary switch	0 - 1 impulse (V-position)
	346670	rotary switch	0 - 1 with catch (0 upper)
3	346671	rotary switch	0 - 1 impulse (0 upper)
	346672	rotary switch	1 - 0 - 2 with catch
	346673	rotary switch	1 - 0 - 2 (1 impulse)
	346674	rotary switch	1 - 0 - 2 (2 impulse)
	345781	rotary switch	1 - 0 - 2 (1 + 2 impulse)
	346675	rotary switch	0 - 1 with catch (V-position)
	346676	rotary switch	0 - 1 impulse (V-position)
	346678	rotary switch	0 - 1 with catch (0 upper)
4	346679	rotary switch	0 - 1 impulse (0 upper)
	346680	rotary switch	1 - 0 - 2 with catch
	346681	rotary switch	1 - 0 - 2 (1 impulse)
	346682	rotary switch	1 - 0 - 2 (2 impulse)
	346683	rotary switch	1 - 0 - 2 (1 + 2 impulse)
5	346323	rotary switch	1 - 0 - 2 with catch




item	order no.	description	colour
1	346685	mushroom button	black
2	346411	mushroom button	red
3	346281	mushroom button	black
4	346325	mushroom button	red

Control equipment

inlay cards for switch actuator




item	order no.	description
1	346191	charging card 0
2	346192	charging card I
3	346193	charging card arrow
4	346194	charging card water

 


item	order no.	description
1	346195	charging card black
2	346196	charging card red
3	346197	charging card green
4	346198	charging card yellow
5	346199	charging card blue



item	order no.	description	colour
1	345778	illuminated push button	red illuminated
2	346413	illuminated push button	green illuminated
3	346686	illuminated push button	red illuminated
4	346687	illuminated push button	green illuminated

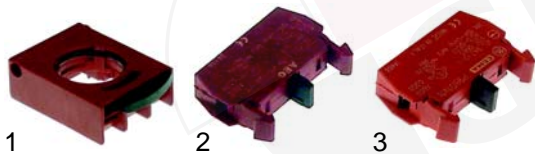 

item	order no.	description
1	346403	contactor block holder
2	345779	switch block 1 NO
	345780	switch block 1 NC
3	346322	switch block 2 NO
	346324	switch block 2 NC
	346280	switch block 1 NO/ NC

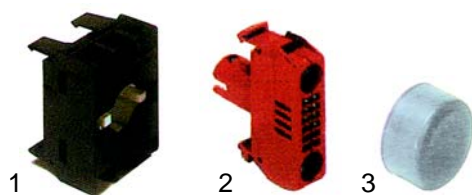 

item	order no.	description	connection
1	346684	switch adapter	-
2	346412	lamp holder max 380V, direct	-
	346688	lamp holder for lamp	230V AC
3	346690	protecting cover	-

ø 22mm JKN (Square D)


(discontinued model)



item	order no.	description	colour	function
1	346482	illuminated push button	black	
2	346483	illuminated push button, illuminated	red	
3	346484	illuminated push button, illuminated	green	
4	345084	rotary switch	black	0 - 1 with catch
	345192	rotary switch	black	1 - 0 - 2 with catch
	345176	rotary switch	black	1 - 0 - 2 impulse



item	order no.	description	colour
1	345173	illuminated push button reset, illuminated	red
2	345174	illuminated push button reset, illuminated	blue
3	345208	indicator light	clear

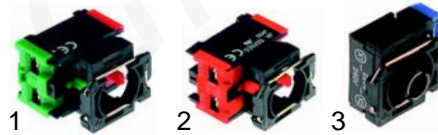 


item	order no.	description	function
1	345085	switch block	1 NO/ 1 NC
2	345194	switch block	2 NC
3	345205	lamp block 250V	



item	order no.	description	function
1	345231	switch block 2 rows	1 NO/ 1 NC
2	345233	switch block 2 rows	2 NC
3	345175	switch block	1 NO/ 1 NC + lamp

ø 22mm LOVATO

 metal series

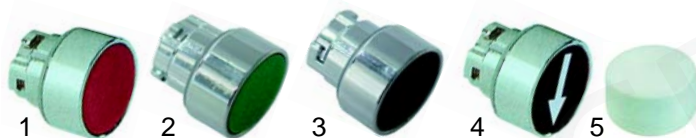


item	order no.	description	colour
1	346773	switch actuator	red
2	346774	switch actuator	green
3	346775	switch actuator	black
4	301196	switch actuator	arrow
5	301197	switch actuator	silicone cover




item	order no.	description	function
1	346776	rotary switch	0 - 1 with catch
	346777	rotary switch	0 - 1 impulse
	346778	rotary switch	1 - 0 - 2 with catch
	346779	rotary switch	1 - 0 - 2 (1 impulse)
	346780	rotary switch	1 - 0 - 2 (2 impulse)
	346781	rotary switch	1 - 0 - 2 (1 + 2 impulse)
2	346782	contactor block holder	
3	301170	switch block	1 NO
4	301171	switch block	1 NC

 type series plastic

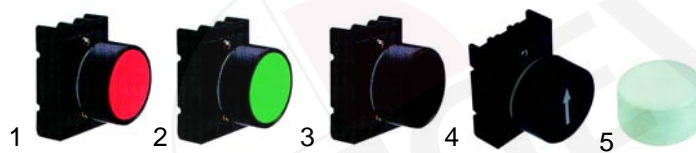

item	order no.	description	colour
1	346783	switch actuator	red
2	346784	switch actuator	green
3	346785	switch actuator	black
4	346786	switch actuator	arrow
5	301197	switch actuator	silicone cover

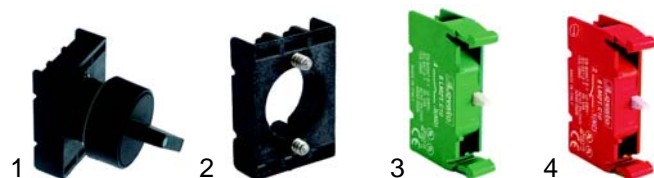 

item	order no.	description	function
1	346788	rotary switch	0 - 1 with catch
	346789	rotary switch	0 - 1 impulse
	346790	rotary switch	1 - 0 - 2 with catch
	346791	rotary switch	1 - 0 - 2 (1 impulse)
	346792	rotary switch	1 - 0 - 2 (2 impulse)
346793	rotary switch	1 - 0 - 2 (1 + 2 impulse)	
2	301169	contactor block holder	
3	301170	switch block	1 NO
4	301171	switch block	1 NC

ø 22mm MOELLER



item	order no.	description	function
1	346723	switch actuator without charging card	impulse
	346596	switch actuator without charging card	with catch
2	346271	switch actuator without charging card	impulse
	346725	switch actuator without charging card	with catch
3	346460	rotary switch	0 - 1 with catch (0 upper)
	346726	rotary switch	0 - 1 impulse (0 upper)
	346727	rotary switch	0 - 1 with catch (V-position)
	346728	rotary switch	1 - 0 - 2 with catch
	346462	rotary switch	1 - 0 - 2 impulse
	346485	rotary switch	1 - 0 - 2 (1 impulse)
	346734	rotary switch	1 - 0 - 2 (2 impulse)
	346729	rotary switch	0 - 1 with catch (0 upper)
	346730	rotary switch	0 - 1 impulse (0 upper)
	346731	rotary switch	0 - 1 with catch (V-position)
4	346732	rotary switch	1 - 0 - 2 with catch
	346733	rotary switch	1 - 0 - 2 impulse
	34735	rotary switch	1 - 0 - 2 (1 impulse)
	346736	rotary switch	1 - 0 - 2 (2 impulse)
5	346339	push button emergency stop	

button cover discs



item	order no.	description	colour
1	346737	push button panel	black
2	346738	push button panel	white
3	346739	push button panel	red
4	346740	push button panel	green
5	346741	push button panel	yellow
6	346742	push button panel	blue



item	order no.	description	colour
1	346437	push button panel O	red
2	346436	push button panel I	green
3	346435	push button panel arrow	black
4	346743	push button panel push	black
5	346744	push button panel water	black



item	order no.	description	colour
1	346466	push button panel lift	black
2	346467	push button panel sink	black
3	346795	push button panel 0	black
4	346794	push button panel 1	white



item	order no.	description
1	346745	illuminated push button without charging card impulse
1	346746	illuminated push button without charging card with catch
2	346747	illuminated push button without charging card impulse
2	346748	illuminated push button without charging card with catch
3	346749	indicator light without charging card

button covers for illuminated push buttons



item	order no.	description	colour
1	346750	push button panel	white
2	346751	push button panel	red
3	346752	push button panel	green
4	346753	push button panel	yellow
5	346754	push button panel	blue




item	order no.	description	colour
1	346755	push button panel O	red
2	346756	push button panel I	green
3	346757	push button panel O	white
4	346758	push button panel I	white
5	346759	push button panel II	white



item	order no.	description	colour
1	346760	lens for indicator light	white
2	346761	lens for indicator light	red
3	346762	lens for indicator light	green
4	346763	lens for indicator light	yellow
5	346764	lens for indicator light	blue



item	order no.	description
1	346293	contactor block holder
2	346292	switch block 1 NO
3	346270	switch block 1 NC

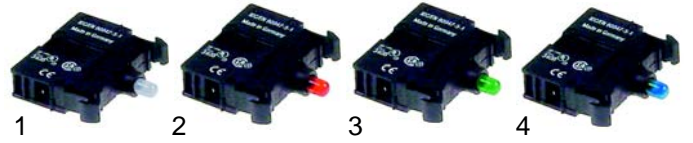 

item	order no.	description	colour	connection
1	346487	signal unit	white	85-264VAC
2	346295	signal unit	red	85-264VAC
3	346765	signal unit	green	85-264VAC
4	346766	signal unit	blue	85-264VAC



item	order no.	description
1	346767	blank screw connection
2	346768	cover PVC

ø 22mm RAFI

series RAFIX 22 (discontinued model)



item	order no.	description	function
1	301073	switch actuator	impulse
	301088	switch actuator	with catch
	301079	rotary switch	0 - 1 with catch
2	301074	rotary switch	1 - 0 - 2 with catch
	301072	rotary switch	1 - 0 - 2 impulse




item	order no.	description	function
1	301071	switch block	2 NO/ 2 NC
2	301070	switch block	1 NO/ 1 NC + lamp

series RAFIX 22 QR



item	order no.	description	colour	function
1	346692	switch actuator	black	impulse
2	346693	switch actuator	red	impulse
3	346694	switch actuator	green	impulse

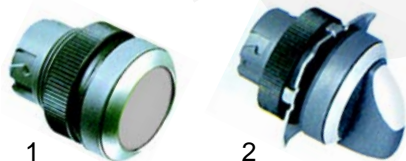 

item	order no.	description	colour	function
1	346695	switch actuator	clear	impulse (illuminated)
	346696	switch actuator	clear	with catch (illuminated)
	346697	rotary switch	-	0-1 with catch (shape L)
2	346698	rotary switch	-	0-1 impulse (0 upper)
	346699	rotary switch	-	0-1 with catch (V-shape)
	346700	rotary switch	-	1-0-2 impulse (1 + 2 impulse)
	346701	rotary switch	-	1-0-2 with catch




item	order no.	description
1	346705	contactor block holder for single contacts
	346706	contactor block holder for double contacts
2	346707	bulb housing 250V, Ba9s
	346708	bulb housing 250V, Ba9s, 130V, with multiplier



item	order no.	description	function
1	346709	switch block	1 NO
2	346710	switch block	1 NC
3	346711	switch block	2 NO
4	346712	switch block	2 NC
5	346713	switch block	1 NO/ 1 NC

ø 22mm SIEMENS

 (discontinued model)

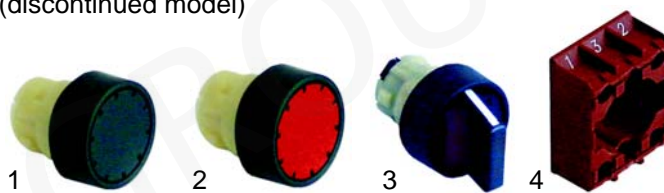

item	order no.	description	colour	function
1	345481	switch actuator	black	-
2	346615	switch actuator	red	-
3	345526	rotary switch	-	0 - 1 with catch
	345527	rotary switch	-	1 - 0 - 2 with catch
4	345482	contactor block holder	-	-



item	order no.	description
1	346332	illuminated push button
2	345482	contactor block holder
3	346331	bulb housing 230V AC for lamp 130V, Ba9s




item	order no.	description	function
1	345525	switch block	1 NO
	345562	switch block	1 NC
2	345483	switch block	1 NO/ 1 NC


series 3

ø 30mm BRETER
(discontinued model)

 
© GEV 2007

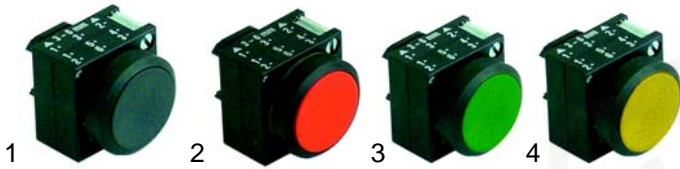


item	order no.	description	colour
1	345671	switch actuator	black
2	345672	switch actuator	red
3	346618	switch actuator	green
4	346619	switch actuator	yellow

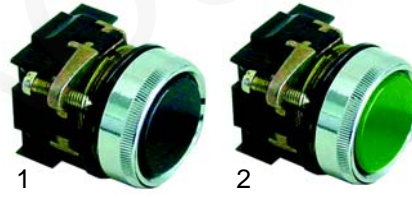 

item	order no.	description	colour
1	345638	switch actuator	black
2	345787	switch actuator	green

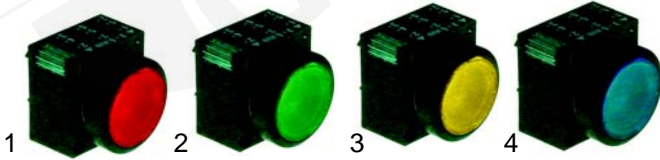 


item	order no.	description	colour
1	346620	illuminated push button	red
2	346621	illuminated push button	green
3	346622	illuminated push button	yellow
4	346623	illuminated push button	blue

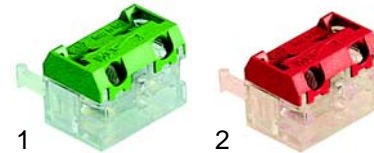 

item	order no.	description	function
1	345640	switch block	1 NO
2	345786	switch block	1 NC



item	order no.	description	function
1	345674	rotary switch	0 - 1 with catch
	346625	rotary switch	0 - 1 impulse
	345673	rotary switch	1 - 0 - 2 with catch
	346627	rotary switch	1 - 0 - 2 (1 impulse)
	346628	rotary switch	1 - 0 - 2 (2 impulse)
2	346629	rotary switch	1 - 0 - 2 (1 + 2 impulse)
	346630	switch block	1 NO
	346631	switch block	1 NC
3	346632	switch block	1 NO/ 1 NC
	346602	switch block	2 NO
	346603	switch block	2 NC

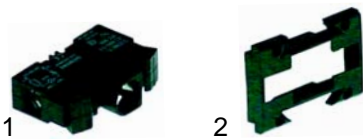 


item	order no.	description
1	346633	bulb housing Ba9s with integrated ballast for lamp 130V and connection 230VAC
2	346616	holder for 3 bulb housings


C
Control equipment

© GEV 2007

 24x24mm SCHLEGEL

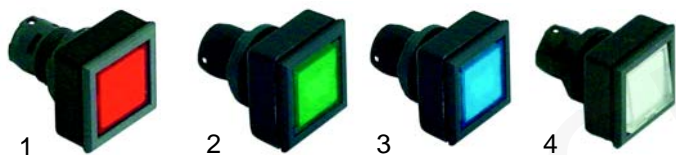

item	order no.	description	colour
1	345930	switch actuator	red
2	345931	switch actuator	green
3	345932	switch actuator	blue
4	359794	switch actuator	clear

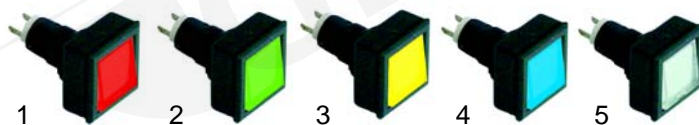 


item	order no.	description	colour
1	359912	signal lamp	red
2	359913	signal lamp	green
3	359914	signal lamp	yellow
4	359915	signal lamp	blue
5	359810	signal lamp	clear



item	order no.	description	item	order no.	description
1	359189	symbol on	4	359191	symbol 1
2	359190	symbol off	5	359192	symbol 2
3	359188	symbol M	6	359193	symbol water

C

 Control equipment

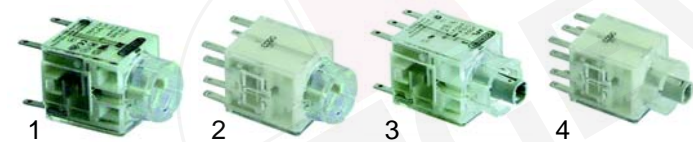

item	order no.	description	function
1	359184	switch block	1 NO/ 1 NC impulse
2	359811	switch block	2 NO/ 2 NC impulse
3	359186	switch block	1 NO/ 1 NC + lamp impulse
4	359793	switch block	2 NO/ 2 NC + lamp impulse



item	order no.	description	function
1	359185	switch block	1 NO/ 1 NC with catch
2	359812	switch block	2 NO/ 2 NC with catch
3	359194	switch block	1 NO/ 1 NC + lamp with catch
4	359187	switch block	2 NO/ 2 NC + lamp with catch



pos.	order no.	description
1	359813	silicone cover

P020600201

