Maintenance Schedule

Customer Service HELPLINE 1-800-282-2886

www.eureka.com

Date Purchased

DUST CUP - Empty after each use



AND REMOVE DUST CUP.



FILTER ASSEMBLY.



EMPTY DUST CUP.

FILTER 81369-1 - Check regularly, clean as needed



REMOVE FILTER ASSEMBLY AND EMPTY DEBRIS.



TWIST AND LIFT OFF LID; SEPARATE 2 FILTERS.



RINSE FILTERS AND LID; DRY THOROUGHLY.



REPLACE INNER FILTER INTO FILTER COVER.



ALIGN NOTCH TO RIB AND PUSH INNER FILTER DOWN.



ALIGN LID NOTCH TO FILTER
RIB AND TWIST TO LOCK.



REPOSITION FILTER ASSEMBLY INSIDE DUST CUP.



REPLACE DUST CUP INTO HAND-HELD VACUUM.

IMPORTANT - Recharge vacuum after each use

© 2009 Electrolux Home Care Products, Inc. Printed in China PN81719