


## Instruction Manual

# HI 140 Series NTC Thermologgers & HI 90140 Infrared Transmitter

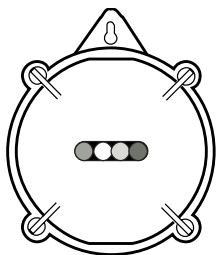

**HANNA**  
instruments  
<http://www.hannacan.com>

**CE**  
These Instruments are in  
Compliance with the CE Directives

Dear Customer,

Thank you for choosing a Hanna product. This manual will provide you with the necessary information for correct operation. Please read it carefully before using the logger. If you need additional technical information, do not hesitate to e-mail us at [techserv@hannacan.com](mailto:techserv@hannacan.com).

These instruments are in compliance with the CE directives EN 50081-1 and EN 50082-1.

### PRELIMINARY EXAMINATION

Remove the instrument from the packing material and examine it carefully. If any damage has occurred during shipment, immediately notify your Dealer or the nearest Hanna Customer Service Center.

Each thermologger comes complete with 3 AA 1.5V batteries.

**Note:** Conserve all packing material until the instrument has been observed to function correctly because any defective item must be returned to the Dealer in its original packing.

### GENERAL DESCRIPTION

HI 140 series is a family of temperature loggers with different ranges (see table below). The user can interact with the meter, i.e. acquire logged data or set logger parameters, through a RS232 communication protocol and a PC. HI 92140 Windows® program supports the communication between the instruments and the PC through the HI 90140 Infrared Transmitter. For further details see the program on-line help.

The HI 140 loggers have the following features: logging enable/disable selectable; programmable High and Low alarm threshold; programmable logging interval; logging delay start; programmable user ID; green and red LED indicators; RS232 optical communication link; non-volatile data storage in EEPROM of logging parameters and logged data; programmable real time clock; BEPS (Battery Error Preventing System). The loggers can memorize up to 7600 samples. The expected battery life is about 4 years at 25°C operating temperature.

All thermologgers are factory calibrated.

The case of the loggers is waterproof IP67 and on the top case a plastic window enables optical data transmission to the HI 90140 Infrared Transmitter and status indication for the user. The two external LEDs are used for communication through the transmitter. The status of the logger is indicated by the 2 central LEDs (green and red) on the top case as follows:

1. GREEN LED ALWAYS ON: this condition occurs when the meter has been reset, i.e. when batteries are changed, requiring the new setting of the logger parameters.



2. GREEN LED FLASHES ONCE EVERY 4": the meter is logging.



3. GREEN LED FLASHES TWICE EVERY 4": the meter is waiting for a delayed logging start.



4. RED LED FLASHES: an alarm condition has been reached (at least once).



## SPECIFICATIONS

Model	Range	Resolution	Accuracy	Hook
HI 140A	-30.0 to 70.0°C	0.5°C	±1.5°C	No
HI 140B	-10.0 to 30.0°C	0.2°C	±0.5°C	No
HI 140C	-30.0 to 10.0°C	0.2°C	±0.5°C	No
HI 140D	20.0 to 60.0°C	0.2°C	±0.5°C	No
HI 140E	-30.0 to -10.0°C	0.1°C	±0.3°C	No
HI 140F	20.0 to 40.0°C	0.1°C	±0.3°C	No
HI 140G	-5.0 to 15.0°C	0.1°C	±0.3°C	No
HI 140H*	10 to 120°C	1°C	±2°C	No
HI 140AH	-30.0 to 70.0°C	0.5 °C	±1.5°C	Yes
HI 140BH	-10.0 to 30.0°C	0.2°C	±0.5°C	Yes
HI 140CH	-30.0 to 10.0°C	0.2°C	±0.5°C	Yes
HI 140DH	20.0 to 60.0°C	0.2°C	±0.5°C	Yes
HI 140EH	-30.0 to -10.0°C	0.1°C	±0.3°C	Yes
HI 140FH	20.0 to 40.0°C	0.1°C	±0.3°C	Yes
HI 140GH	-5.0 to 15.0°C	0.1°C	±0.3°C	Yes
HI 140HH*	10 to 120°C	1°C	±2°C	Yes

\* The models HI 140H and HI 140 HH are provided with a stainless steel external probe and 1.5 m (5') Teflon® coated cable.

	HI 140	HI 90140
EXTERNAL DIAMETER	86.5 mm (3.4")	159 mm (6.3")
HEIGHT	35 mm (1.4")	47.5 mm (1.9")
WEIGHT	150 g (5.54 oz.)	150 g (5.54 oz.)



## START UP

In order to communicate with the HI 140 thermologger the HI 92140 application software must be already installed on your PC.

Connect the HI 90140 Infrared Transmitter to your computer through an available RS232 port.

Place the HI 140 on the cradle of the transmitter.

Run HI 92140 software and refer to the on-line help for any further information about setting the parameters of the logger, acquire logged data, etc.

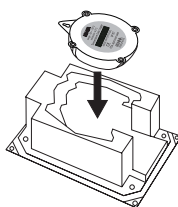


## BATTERY REPLACEMENT

Battery replacement must only take place in a non hazardous area using the appropriate battery type (1.5V AA).

When the batteries need to be replaced, simply remove the four screws on the rear cover of the logger and replace the three batteries with new ones paying attention to the correct polarity. After replacing the batteries, press the reset button on the printed circuit board. The red LED blinks and then the green LED stays on. Replace the cover and tighten the four screws.

**Note:** When batteries are replaced all logger parameters have to be set again by the user as soon as possible to avoid draining the batteries.

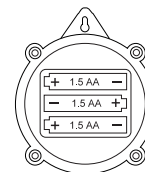

## CE DECLARATION OF CONFORMITY


### Recommendations for users

Before using these products, make sure that they are entirely suitable for the environment in which they are used.

Operation of these instruments in residential areas could cause unacceptable interferences to radio and TV equipments, requiring the operator to take all necessary steps to correct interferences.

Any variation introduced by the user to the supplied equipment may degrade the instruments' EMC performance.

To avoid damages or burns, do not perform any measurement in microwave ovens.

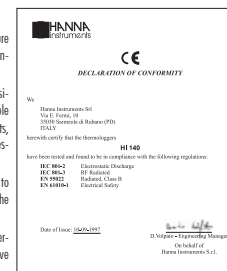

## WARRANTY

HI 140 loggers are warranted for one year against defects in workmanship and materials when used for their intended purpose and maintained according to instructions. This warranty is limited to repair or replacement free of charge. Damages due to accident, misuse, tampering or lack of prescribed maintenance are not covered. If service is required, contact the dealer from whom you purchased the instrument. If under warranty, report the model number, date of purchase, serial number and the nature of the failure. If the repair is not covered by the warranty, you will be notified of the charges incurred. If the instrument is to be returned to Hanna Instruments, first obtain a Returned Goods Authorization Number from the Customer Service department and then send it with shipment costs prepaid. When shipping your instrument, make sure it is properly packaged for complete protection. To validate your warranty, fill out and return the enclosed warranty card within 14 days from the date of purchase. All rights are reserved. Reproduction in whole or in part is prohibited without the written consent of the copyright owner, Hanna Instruments Inc.